



WOODY'S ASSEMBLY INSTRUCTIONS

TOOLS NEEDED



SCREW



WASHER




STAND-OFF




WOOD BASE



PLATE

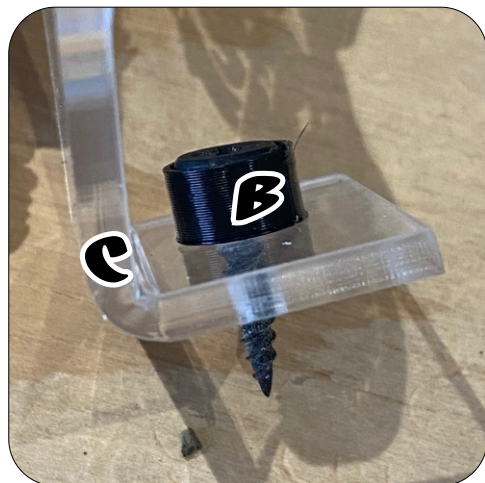

**PEEL PAPER OF
STAND OFF
AND ALIGN
PARTS A-B-C**

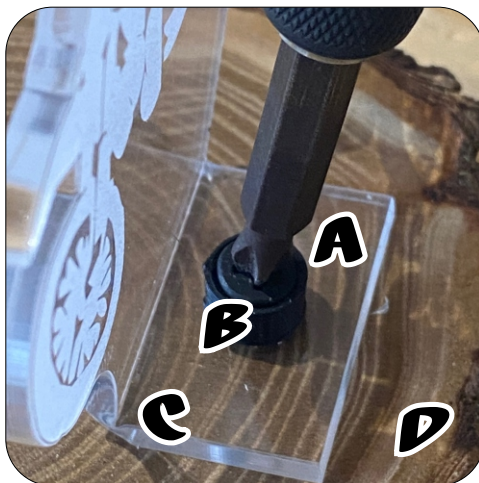

**USE SCREW DRIVER
TO SCREW DOWN
STAND OFF IN
DESIRED PLACEMENT**



**PEEL AND STICK
ENGRAVED PLATE
TO BASE**

